

PRIVACY PANEL

Installation Guide



For assistance Call:
1 (207) 795-6536

Futureguard Building Products
101 Merrow Road, Auburn, Maine 04210
www.futureguard.net
IG-PC-V1

PROCESS:

- 1 Unbox the Privacy Panel Kit and ensure all components are present.
- 2 Remove one of the inner 9/16 nuts securing each leg. (Closest to the corner)
- 3 Replace the washer with the **CBS** Curtain Bracket Spacer so that the hole is aligned on the leg bolt, and sits flush inside the channel of the soffit.
- 4 Screw the **CBU** Curtain Bracket Upper onto the leg bolt, aligning the slots in the spacer so that the bracket is oriented to receive the cable.
- 5 On one end of the **CA** cable assembly, remove the nuts and washer, insert the end into one of the **CBU** brackets. Reinstall the washer and nuts.



ASSEMBLY INSTRUCTIONS




6

Repeat step 3-5 with the the opposite leg. Tighten the **CA** nuts as necessary to tension the cable, until the cable has minimal sag.

7

Once the desired cable tension is reached, lock the cable by tightening the jam nut against the tensioning nut on both ends of the cable assembly.

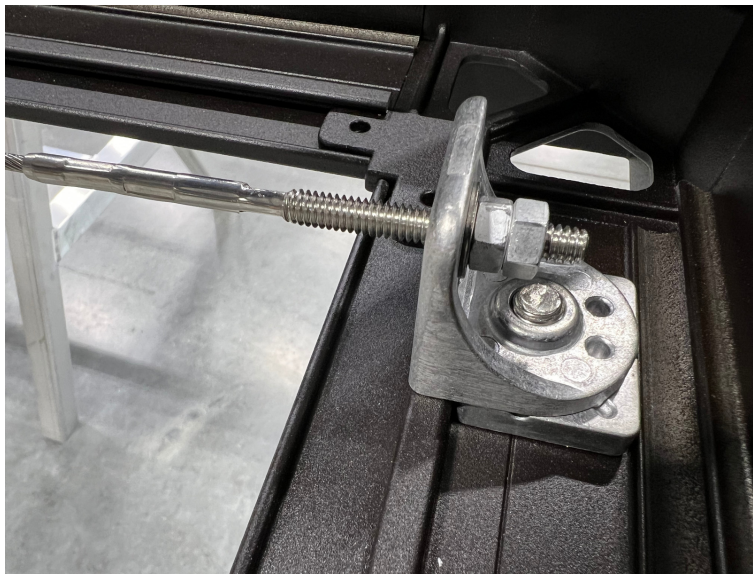

8

Install the **CH** curtain hangers into the grommets on the **PP** privacy curtain.

9

Install the **CH** curtain hangers onto the **CA** cable. Orient the privacy panel so that the snaps operate from the inside of the leg.

● If your privacy panel is split, make sure to orient them so the snaps are facing into the corner.

Futureguard Building Products

101 Merrow Road, Auburn, Maine 04210

www.futureguard.net

IG-PC-V1.1

ASSEMBLY INSTRUCTIONS



10

Using the snaps on the **PP** Privacy Panel as a template, mark the location of the buttons on the legs.

11

Secure the **MS** male snap onto the leg in the previously marked locations.

If you did not order corner curtains with your privacy panel, refer to the instruction guide included with your Sash.

Futureguard Building Products

101 Merrow Road, Auburn, Maine 04210

www.futureguard.net

IG-PC-V1.1