

SASH-STANDARD HEIGHT LEGS

Installation Guide



For assistance Call:

1 (207) 795-6536

Futureguard Building Products


101 Merrow Road, Auburn, Maine 04210

www.futureguard.net

IG-SO-STD-V1

PROCESS:

- 1 Unbox your sash and ensure all components are present.
- 2 Measure 34" up from the mounting surface on the outside corner of the desired leg.
- 3 Measure 2-15/16" from the outside corner and make a mark on either side of the leg. Be sure the marks are 34" from the bottom of the leg.

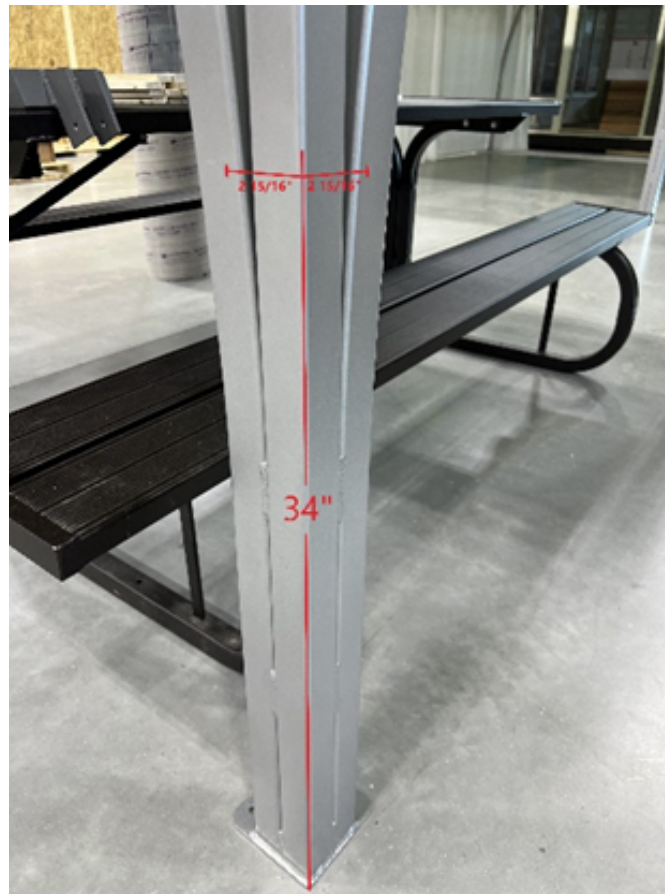

ASSEMBLY INSTRUCTIONS



4

Using a #2 Phillips Driver, install the male buttons onto the leg in the previously marked locations.



5

Install the sash onto the newly installed snaps.



Futureguard Building Products

101 Merrow Road, Auburn, Maine 04210

www.futureguard.net

IG-SO-STD-V1